


GB Assembly Instructions

G0AMH, G0LMH, G0MMH
GBAMH, GBLMH, GBMMH
GEMMH
Absolute Encoder – DeviceNet


9-16

9

 All movable adjusting elements need tolerance in both axial and radial direction in order to equalize shifts by temperature and of mechanical nature. Tighten both fixing and clamp ring screws firmly.

Electrical installation


- Do not modify encoder in any electrical way and carry out any wiring work under power supply.
- Any electrical connection and plugging-on whilst under power supply is not permitted.
- A separate encoder supply has to be provided with consumers with high interference emission.
- Installation of the whole system has to be according to EMC standards. Installation environment as well as wiring have an impact on the encoder's EMC. Encoder and supplying lines are to be in separated locations or remote from lines with high interference emission (frequency transformers, protections, etc.).
- Encoder case and supply cable have to be completely screened.
- Ground (PE) encoder by using screened cables. The braided shield has to be connected to cable gland or plug. Grounding (PE) on both sides is recommended. Ground the case by the mechanical assembly, if latter is electrically isolated a second connection has to be provided. Ground cable screen by the subsequently connected devices.
- In case of ground loop problems at least grounding on one side is imperative.

 Any disregard may lead to malfunctions, material damage and personal injury.

Electrical connection

The bus cover is to be stored and transported whilst in the ESD bag only. The bus cover has to fit the case tightly and has to be firmly secured by screws.

- Unscrew both fixing screws of the bus cover.
- Loosen both bus cover elements carefully and remove it in axial direction.

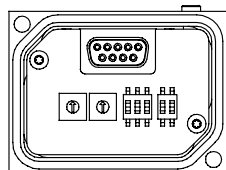

13



Danger

Warnings of possible danger.



General instructions

Information on appropriate product handling.



General remarks

Additional information

The installation instruction is supplementary to already existing documentation (e.g. catalog, data sheet, manual).



It is imperative to read the manual carefully prior to starting the device.

Appropriate use

- The encoder is a precision measuring device. It is explicitly designed for registration of angular positions and revolutions as well as evaluation and supply of measuring values as electric output signals for the subsequently connected device. The encoder must not be used for any other purpose.

Start up

- Installation and assembly of the encoder only by electrically skilled and qualified personnel.
- Consider also the operation manual of the machine manufacturer.




Safety instructions

- All electrical connections are to be revised prior to starting the system.
- Incorrect assembly and electrical connections or any other inappropriate work at encoder and system may lead to malfunction or failure of the encoder.
- Any risk of personal injury, damage of the system or company equipment due to failure or malfunction of the encoder has to be eliminated by corresponding safety measures.
- Do not operate encoder beyond the limit values stated in the data sheet.



Any disregard may lead to malfunctions, material damage and personal injury.

10



Switch 1:
ON = final user / OFF = user X
Switch 2: without function



Baud rate	Dip switch position		
	1	2	3
125 kBit/s	X	OFF	OFF
250 kBit/s	X	OFF	ON
500 kBit/s	X	ON	OFF
125 kBit/s*	X	ON	ON

X = without function

* = This switch position is not defined, therefore internally set to default 125 kBit/s.

Connection – cable gland (bus cover)

- Unscrew cap nut of cable gland. Push cap nut and seal insertion onto the cable coat.
- Strip the cable sheath and cores, remove the braided screen and shield film completely as far as the end of the cable sheath.
- The braided screen, shield film and Drain connector of the cable must not touch the housing.
- Push seal insertion to the end of the cable coat. Insert seal and cable flush into the cable gland. Secure by carefully tightening the cap nut.



- Cable glands no. 1 and 2 are for optional use. Consider the permitted cable cross-section.
- Use the shortest way to insert the cores into the terminals and mind the maximum core cross-section.
- Use isolated core end sleeves. Use preferably isolated twin core end sleeves for supply voltage.

14

Disposal

Encoder components are to be disposed of according to the regulations prevailing in the respective country.




Transport and storing

- In original packing only.
- Do not drop or expose encoder to major shocks.

Assembly

- Open clamping ring completely before mounting the encoder.
- Avoid punches or shocks on case and shaft.
- Avoid case distortion.
- Do not open or modify encoder in any mechanical way.
- The spring arm of the spring coupling has to be free movable.


 Hollow shaft, bearing, glass disc or electronic components might be damaged and a secure operation is no longer guaranteed.

Hollow shaft mounting


Mounting with clamping ring
Plug encoder completely onto drive shaft (ISO-fit f7) and tighten clamping ring firmly. The drive shaft must penetrate the encoder's hollow shaft to a depth of at least 35 mm.

Mechanical assembly

Slide encoder onto the drive shaft and insert torque pin into the adjusting element provided by customer or insert pin into the mounted adjusting part (with rubber spring element) provided by customer.

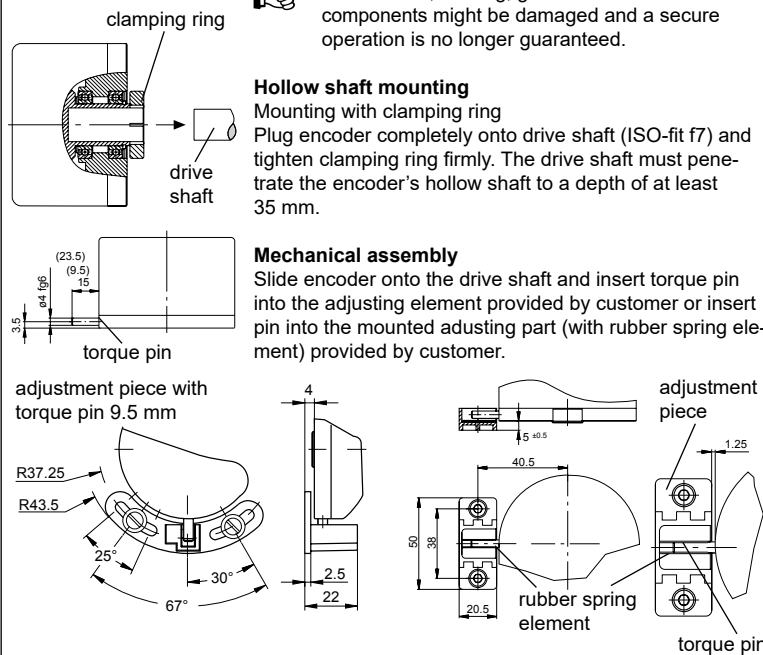

11

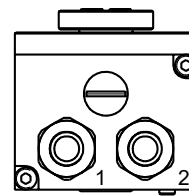

- Consider the permitted torque of the screw terminal 0.4 Nm / M2.6.
- Any cable gland not used has to be sealed by blind plug (included into delivery). The cap nut must be firmly tightened.

Starting torque


Terminal block/screw terminal max. 0.4 Nm
(recommended starting torque 0.3 Nm)
Screwing - bus cover max. 1.9 Nm
Spring coupling mounting max. 1.2 Nm
Clamping ring mounting M3 max. 1.2 Nm

Core cross-section

Single wire (rigid)	Max. 1.5 mm ²
Fine wire (flexible)	Max. 1.0 mm ²
Fine wire (flexible)	With isolated ferrule max. 0.75 mm ²
Cable diameter	
Cable gland 1, 2	8...10 mm (-40...+85 °C) 5...9 mm (-25...+85 °C)

Terminal assignment cable gland

CAN_L	CAN bus signal (dominant Low)
CAN_H	CAN bus signal (dominant High)
DRAIN	Shield
UB	Supply voltage 10...30 VDC
GND	Ground connection relating to UB


 Terminals of the same significance are internally connected and identical in their functions. Max. load on the internal terminal connections UB-UB and GND-GND is 1 A each.

- Plug the bus cover carefully onto the D-SUB plug of the basic encoder, then push it over the rubber seal. Avoid the case getting wedged. The bus cover has to fit tightly the basic encoder.
- Tighten both fixing screws firmly and conformable.
- An optimized connection between encoder case and the braiding shield of the supply cable is only achieved by a complete and close fit of the bus cover onto the basic encoder (interlock).

15

Spring coupling


Fasten spring coupling at the fixing holes provided on housing by means of screws. Slide encoder onto the drive shaft and fasten spring coupling at the surface provided with screws.

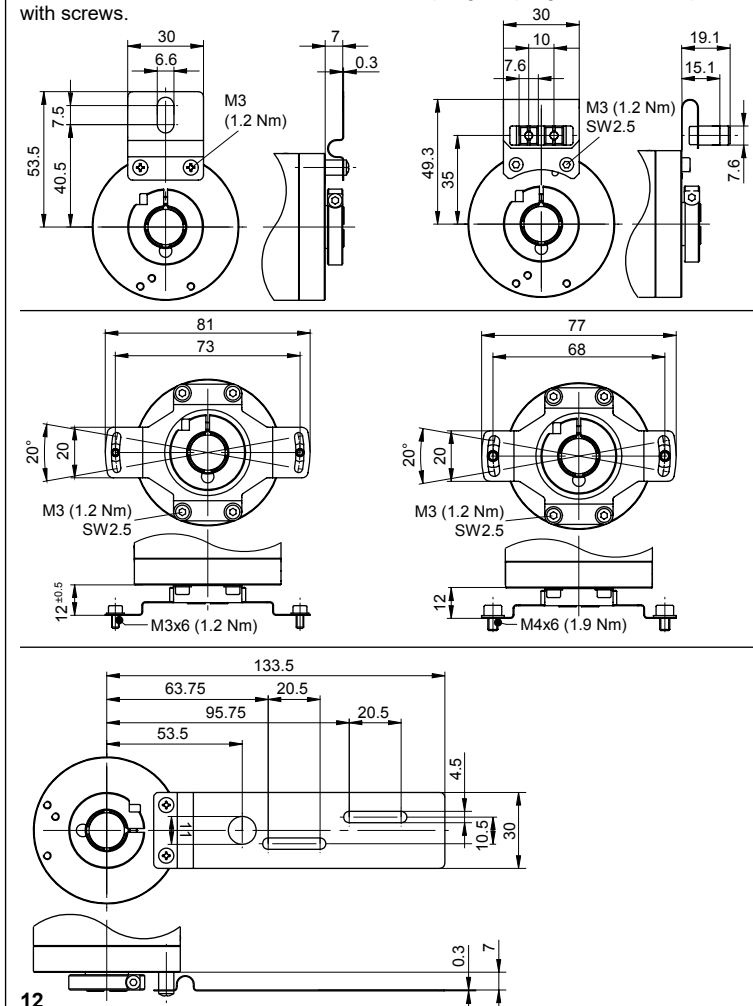


12

Dimensions

Clamping ring on flange

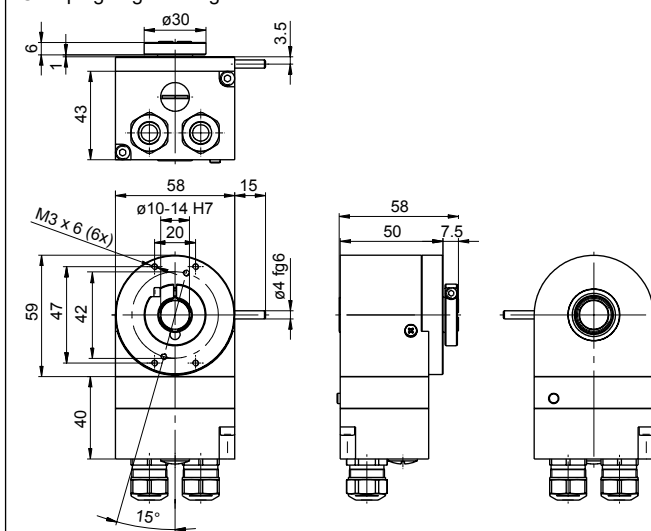

Clamping ring on housing

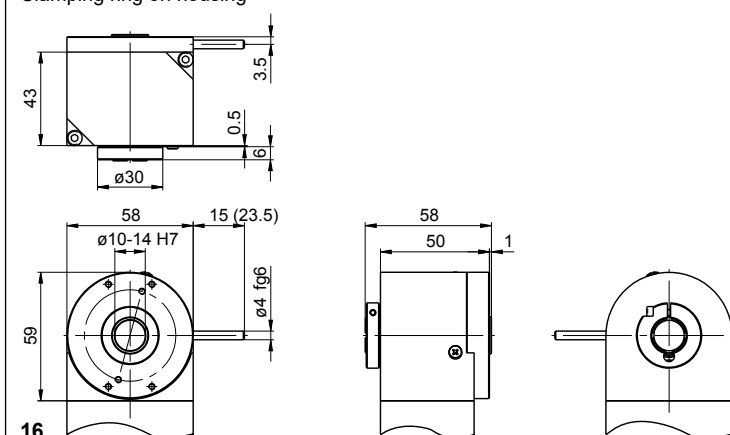

16